

ONBOARD SYSTEMS INTERNATIONAL

13915 NW 3rd Court Vancouver, WA 98685

USA

Phone: 360-546-3072 Fax: 360-546-3073 Toll Free: 800-275-0883

www.OnboardSystems.com

SERVICE BULLETIN
Document No. 159-024-00 Rev. 0
Date: October 24, 2008

Subject: 3K Long Line Hook Keeper Bolt

Cargo Hooks P/N 528-018-00 and P/N 528-018-01 **Affected:**

Compliance: Recommended within 2 months of the issue date of this Service

Bulletin.

Description: Onboard Systems has received reports of failure of the keeper

bolt on the 3K Long Line Cargo Hook 528-018-01.

Cause: It has been determined that the keeper's bolt is inadequate to

support rigging loads which repeatedly ride against the keeper. The situation is also made worse if the keeper is installed

improperly in reverse orientation.

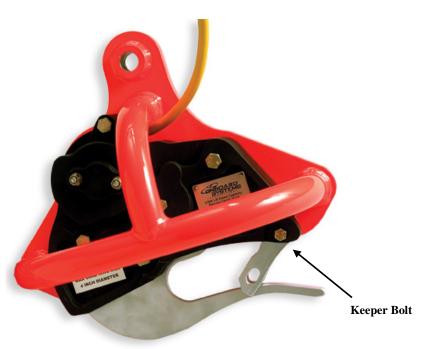


Figure 1 — Keeper Bolt Location

Action: Two actions are required:

1. Replace 1/4" keeper bolt with 5/16" keeper bolt.

2. Verify proper orientation of keeper (see Figure 8).





Flow Monitoring Systems



Customer Directed Development

Manpower: Approximately 1.5 man-hours will be required.

Required The following materials are required for accomplishment of this bulletin and may be

Material: obtained from Onboard Systems as Modification Kit 212-025-00:

| ONBOARD SYSTEMS MODIFICATION KIT 212-025-00 | | | |
|---|------------|---------------|----------------|
| Qty | P/N | Description | Mfg P/N |
| (1) | 510-714-00 | Bolt | NAS6205-36 |
| (1) | 510-239-00 | Washer | NAS 1149F0532P |
| (1) | 510-370-00 | Nut | AN365-524 |
| (1) | 514-014-00 | Spring | Same |
| (1) | 510-715-00 | Drill | 5/16 x 12" |
| (1) | 291-277-00 | Alignment Pin | Same |

Special Tools: Drill Press, clamps, parallel blocks, and drill vise.

Weight & Not affected

Balance:

Electrical Load Not affected


Data:

Publications 120-090-00 Talon 3,000 LB Long Line Cargo Hook Owners Manual

Affected:

Accomplishment Instructions:

- 1. Check the serial plate of the Cargo Hook to determine whether this service bulletin has been previously complied with. The serial plate is marked 528-018-02 after compliance with this bulletin.
- 2. Figure 2 below gives an illustrated parts list of the replacement parts and parts to be modified.

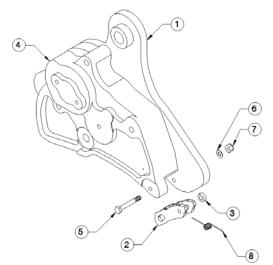

| ITEM | P/N | DESCRIPTION | |
|------|------------|---------------------------|--|
| 1 | 232-127-00 | 27-00 MAIN PLATE ASSEMBLY | |
| 2 | 290-615-00 | KEEPER | |
| 3 | 290-681-00 | SPACER | |
| 4 | 290-682-00 | SOLENOID HOUSING | |
| 5 | 510-714-00 | -00 BOLT | |
| 6 | 510-239-00 | WASHER | |
| 7 | 510-370-00 | NUT | |
| 8 | 514-014-00 | SPRING | |

Figure 2 — Illustrated Parts

3. Begin by removing the Keeper, P/N 290-615-00, Spring P/N 514-003-00 and Spacer P/N 290-681-00 by removing and discarding the existing bolt, nut and washer. *Do not separate the Solenoid Housing from the Main Plate Assembly*. Retain the Spacer and Keeper.



It is not necessary to fully disassemble the Cargo Hook to remove and replace the Keeper. Carefully follow the instructions for replacement of the Keeper.

- **4.** Securely clamp the Keeper in the drill press vise and drill the bolt hole to a diameter of .313" +.01/-0.00. Deburr holes.
- 5. Securely clamp the hook assembly to the drill press table as shown in Figure 3. With a $5/16 \times 12$ " drill bit, drill the keeper bolt hole to a diameter of .313" +.01/-0.00. Deburr holes.



Figure 3 — Drill Setup

- **6.** Securely clamp the Spacer P/N 290-681-00 in the drill press vise or lathe and drill the bolt hole to a diameter of .313" + .01/-0.00. Deburr holes.
- 7. Trim the ends of the Spring P/N 514-014-00 as shown in Figure 4.

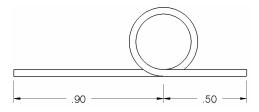


Figure 4 — Trim Spring

8. Assemble the Keeper, Keeper Spring and Spacer together with Alignment Pin, P/N 138-441-00 as shown in Figure 5. (Note orientation of Keeper, Spring and Spacer). Slide the assembly into the Cargo Hook so that the long end of the spring engages the Solenoid cover as shown in Figure 6, ensuring that the Keeper is oriented as shown in Figure 7. Align the bolt holes, and install the bolt, pushing out the alignment pin.

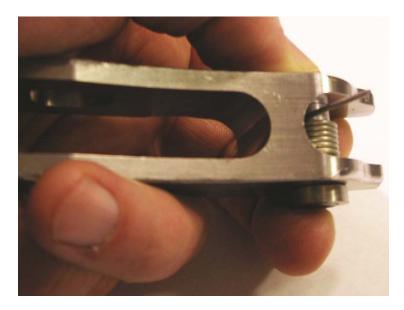


Figure 5 — Assemble Keeper, Spring, Spacer & Alignment Pin.

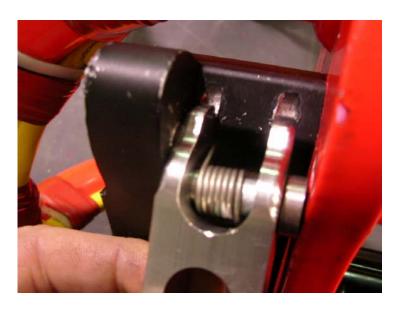


Figure 6 — Engage long end of spring with Solenoid Cover.

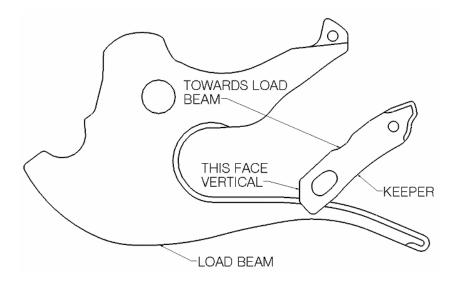


Figure 7 — Ensure proper Orientation of Keeper.

- **9.** Check for free operation of the keeper.
- 10. Re-stamp the part number of the Cargo Hook as 528-018-02 to denote compliance with this bulletin.