

Please check web site at www.onboardsystems.com for the latest revision of this manual

ROTORCRAFT FLIGHT MANUAL SUPPLEMENT

***Onboard Systems
Cargo Hook Swing Suspension System
Retrofit Kit***

***Eurocopter Helicopter Models
AS350B, AS350B1, AS350B2, AS350B3
AS350BA, & AS350D***

R/N _____ S/N _____

FAA Approved: 
for Manager, Seattle Aircraft Certification Office

Date: **DEC 10 2004**

Revised:



RFM Supplement

Document Number
121-015-01

AS 350 Series

Page
1 of 9

Revision 0

INTRODUCTION

This supplement must be attached to the appropriate FAA approved Eurocopter Rotorcraft Flight Manual when an Onboard Systems P/N 200-286-01 Cargo Hook Swing Suspension System is installed in accordance with Supplemental Type Certificate (STC) No. SR01393SE. In addition it is necessary to obtain Eurocopter's EXTERNAL LOAD TRANSPORT "CARGO SWING" Flight Manual Supplement for your particular AS350 model helicopter.

The information contained herein supplements or supersedes the basic manual only in those areas listed herein. For limitations, procedures and performance information not contained in this supplement, consult the basic Rotorcraft Flight Manual.

The 200-286-01 Cargo Hook Swing Suspension System Retrofit Kit is comprised of:

- A suspended pyramid frame that supports the cargo hook and is designed to reduce swinging of the load.
- An electrical release system that provides means for release by pilot actuation of the push button on the control console and a switch on the cyclic.
- A manual release system, which provides an addition means of releasing a cargo hook load. A lever mounted to the collective actuates it.
- A load weigh system, which is comprised of an indicator mounted to the RH door pillar within the cockpit and a load cell at the cargo hook.



RFM Supplement

Document Number

121-015-01

AS 350 Series

Page
2 of 9

Revision 0

I. LIMITATIONS

I.1 Airspeed Limits

Consult the Eurocopter Flight Manual Supplement for your particular AS350 model for airspeed limits when an external load is attached.

Maximum operational air speed with external loads is dependent upon the load configuration and sling length. It is the responsibility of the operator to establish the maximum operational speed for each specific configuration.

I.2 Type of Operation

The basic Flight Manual remains applicable. With a load attached to the cargo hook, operation shall be conducted in accordance with the respective national operational requirements. For U.S. operators FAR Part 133 is applicable.

This cargo hook is approved for non-human cargo, class B and C rotorcraft load combinations only.

The rotorcraft may also be operated with the suspension removed and the fixed provisions portion of the kit installed only. The fixed provisions include fittings at the rotorcraft hard points, fixed manual and electrical release cables, and all cargo hook related equipment in the cockpit.



RFM Supplement

Document Number
121-015-01

AS 350 Series

Page
3 of 9

Revision 0

I.3 Weight and CG

Consult the Eurocopter Flight Manual Supplement for your particular AS350 model for longitudinal cg limits when an external load is attached.

I.4 Cargo Hook Load

The Cargo Hook Swing Suspension System is rated for 3086 lbs (1400 kgs).

Consult the Eurocopter Flight Manual Supplement for your particular AS350 model for external load limitations.

I.5 Placards

Consult the Eurocopter Flight Manual Supplement for your particular AS350 model for placard information



RFM Supplement

Document Number
121-015-01

AS 350 Series

Page
4 of 9

Revision 0

II. NORMAL PROCEDURES

II.1 Daily or Pre-Flight Check

Before each cargo hook use perform the following procedures. If the procedures are not successful do not use the equipment until the problem has been corrected.

II.1.1 Exterior Check

1. Inspect all mounting fasteners to ensure that they are tight.
2. Inspect the electrical connectors for damage.
3. Inspect the hook and suspension frame for cracks and damage.
4. Inspect the hook load beam for gouges and cracks.
5. Inspect the suspension cables for damage and fraying.
6. Swing the hook and the suspension assembly to their full extremes to verify that they do not reach the limit of the mechanical release cable range of motion and actuate the mechanical release mechanism.



RFM Supplement

Document Number

121-015-01

AS 350 Series

Page
5 of 9

Revision 0

II.1.2 Interior Check

1. Cycle the manual release mechanism to ensure proper operation. Pulling the manual release handle will cause the hook to open. Hook may be returned to the locked position by manually pushing up on the load beam. The hook should snap shut. The hook may be flown in the open position to facilitate loading by a ground crew.
2. Cycle the electrical release mechanism to ensure proper operation. Pressing the CARGO RELEASE switch on cyclic will cause hook to open. Hook may be returned to the locked position by manually pushing up on the load beam. The hook should snap shut. The hook may be flown in the open position to facilitate loading by a ground crew.
3. Power on the hook Load Indicator and allow it to warm up for 5 minutes (with no load on the hook). Press both Indicator buttons at the same time to go to the setup mode. Scroll through the menu until the symbol "0 in" is displayed, then press the right button. Remove any weight that is not to be zeroed out and press either button to complete the procedure.



RFM Supplement

Document Number
121-015-01

AS 350 Series

Page
6 of 9

Revision 0

II.2 Cargo Hook Rigging

Extreme care must be exercised in rigging a load to the Cargo Hook. The following illustration shows the recommended rigging configuration.

CAUTION: The example shown is not intended to represent all possibilities. It is the responsibility of the operator to assure the hook will function properly with the rigging. Some combinations of small primary rings and large secondary rings could cause fouling during release.

Nylon Type Straps or Rope

CAUTION: Nylon type straps (or similar material) or rope must not be used directly on the cargo hook load beam. If nylon straps or rope must be used they should be first attached to a steel primary ring. Verify that the ring will freely slide off the load beam when it is opened. Only the primary ring should be in contact with the cargo hook load beam. See Figure 1.

II.3 In Flight

Consult the Eurocopter Flight Manual Supplement for your particular AS350 model for normal in flight procedures.



RFM Supplement

Document Number
121-015-01

AS 350 Series

Page
7 of 9

Revision 0

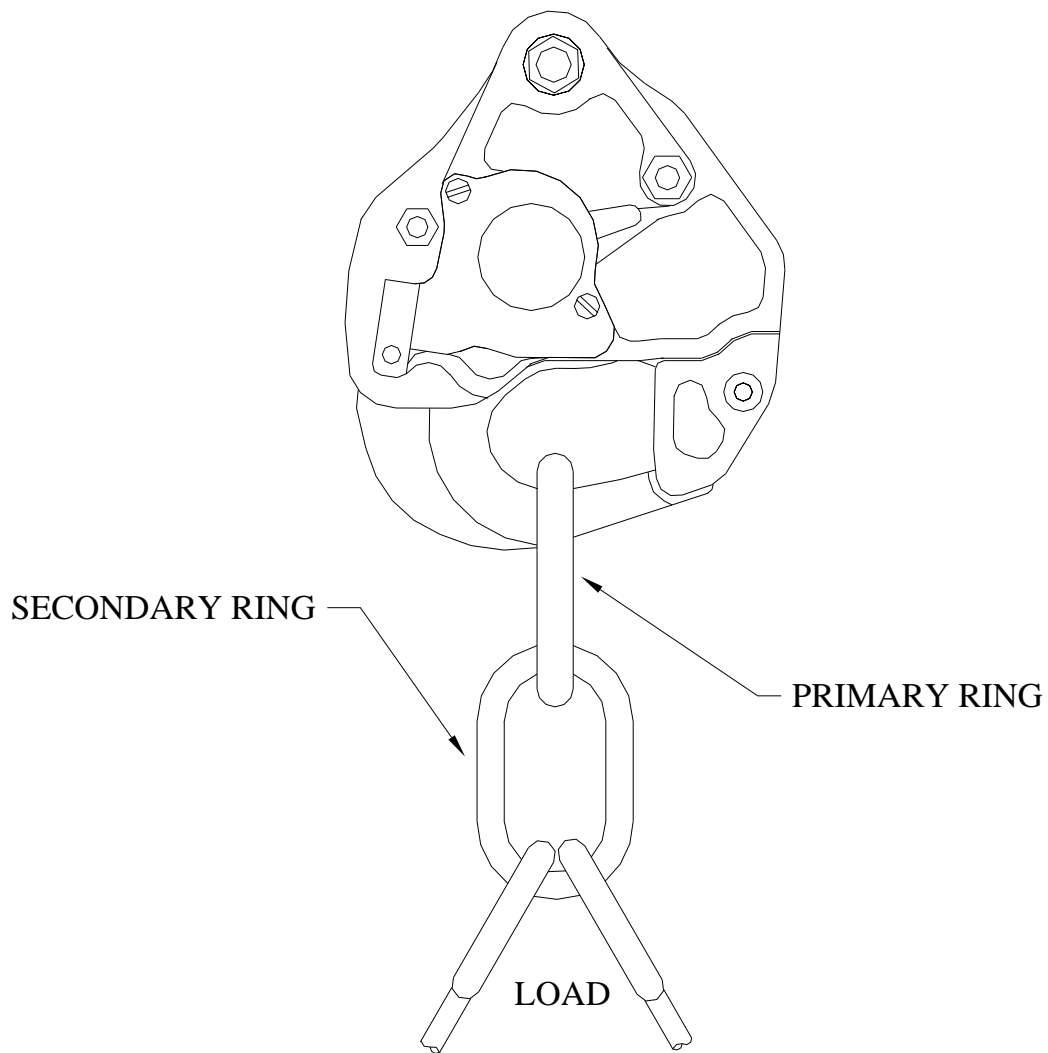


Figure 1. Example of Recommended Cargo Hook Rigging.

III. EMERGENCY PROCEDURES

Consult the Eurocopter Flight Manual Supplement for your particular AS350 model for emergency procedures.

III.1 Cargo Hook Fails to Release Electrically.

In the event that the Cargo Hook will not release the external load electrically, proceed as follows:

1. Maintain tension on the sling.
2. Pull the mechanical release handle to release the external load.

IV. PERFORMANCE

The basic Flight Manual and “Cargo Swing” Flight Manual Supplement issued by Eurocopter remain applicable when there is no external load attached.

When there is an external load, performance will be reduced depending on its size, weight, and shape.

The Load Weigh System is designed and installed as a means of MONITORING the load (weight) suspended from the cargo hook. Functional and performance characteristics have not been determined on the basis of load cell indication or display. Therefore, this instrument shall NOT be used as a primary indication of performance and flight operation must NOT be predicated on its use.



RFM Supplement

Document Number

121-015-01

AS 350 Series

Page
9 of 9

Revision 0